

VUE **30**
40 [®]

SXY

TABLE OF CONTENTS



Table of Contents

Safety	S-1 - S-17
Commitment to Safety.....	S-2
Vendor Installation.....	S-3
Electrical Hazards	S-7
Mechanical Hazards.....	S-10
Refrigeration Hazards	S-11
Temperature Hazards.....	S-11
Substitutions and Modifications.....	S-12
Consumer Safety Warning	S-14
Parts, Sales, and Service Centers	S-15
Parts, Sales, and Service Centers for Latin America	S-16
General Information	G-1 - G-8
General Information	G-2
Initial Set-up	G-3
Tray Label Installation	G-5
Loading Instructions	G-6
Vend Mechanism Part Description	G-6
Cleaning Information	CL-1 - CL-4
Care and Cleaning	CL-2
Programming	P-1 - P-30
Vec 15 Programming Operation.....	P-2
Diagnostics.....	P-3
Coin Payout.....	P-3
Tube Fill	P-4
Test Mode.....	P-4
Calibration	P-9
Cash Data	P-11
Sales Data.....	P-11
Set Price.....	P-11
Space to Sales	P-12
Discount Counter	P-14
Free Counter	P-14
Configuration.....	P-15
Door Closed Password	P-17
Set Language.....	P-17
Set Clock.....	P-18
Lighting.....	P-18
Refrigeration.....	P-20
Sales Block	P-22
Discount	P-24
Override	P-26



Custom Message	P-26
Return	P-27
Wiring Diagram	P-28
Custom Space to Sales Diagram	P-30
Cabinet Parts	C-1 - C-11
Cabinet Assembly	C-2
Refrigeration Assembly	C-4
Power Distribution Assembly.....	C-5
Harness Quick Guide.....	C-7
Shelves & Trays Parts	ST-1 - ST-5
Shelves & Trays Assembly.....	ST-2
Tray Assembly.....	ST-3
Door Parts	D-1 - D-29
Reading a Parts List.....	D-2
Hardware List.....	D-4
Door Assembly	D-6
Hand Assembly	D-10
Z Housing Assembly	D-12
Y Rail Assembly - Left/Hinge Side	D-13
Y Rail Assembly - Right/Latch Side.....	D-15
X Rail Assembly	D-18
X Axis Carriage Assembly.....	D-19
Coin Entry & Coin Return Assembly	D-21
Delivery Hopper & Flap Assembly.....	D-23
Delivery Hopper Assembly.....	D-26
T-Handle Lock Assembly.....	D-27
Harness Quick Reference Guide	D-28
Wiring Diagram	D-29
Maintenance	M-1 - M-9
Preventative Maintenance Suggestions.....	M-2
Lubrication Guide	M-2
Refrigeration Operation.....	M-3
Refrigeration Parts Description	M-6
Troubleshooting	T-1 - T-14
Parts Return Procedure	T-2
Error Codes.....	T-3
General Machine Troubleshooting	T-10