

QUICK TIPS

ERROR CODE GUIDE

FOR HFD/HFDC/HFDHC/HFDM UNITS

- E30** Internal ambient thermistor open circuit
- E60** Upper left shelf thermistor open circuit (except HFDM)
- E61** Middle left shelf thermistor open circuit (except HFDM)
- E62** Lower left shelf thermistor open circuit
- E63** Upper right shelf thermistor open circuit
- E64** Middle right shelf thermistor open circuit
- E65** Lower right shelf thermistor open circuit
- E70** Upper left shelf no heating (except HFDM)
- E71** Middle left shelf no heating (except HFDM)
- E72** Lower left shelf no heating
- E73** Upper right shelf no heating
- E74** Middle right shelf no heating
- E75** Lower right shelf no heating
- E90** Unable to read USB drive (check vendo.cfg for file format error)

CLEAR THE ERROR BY POWERING OFF THE UNIT, CORRECTING THE PROBLEM, AND TURNING THE UNIT ON AGAIN.



FOR MORE TIPS VISIT: WWW.VENDOCO.COM